
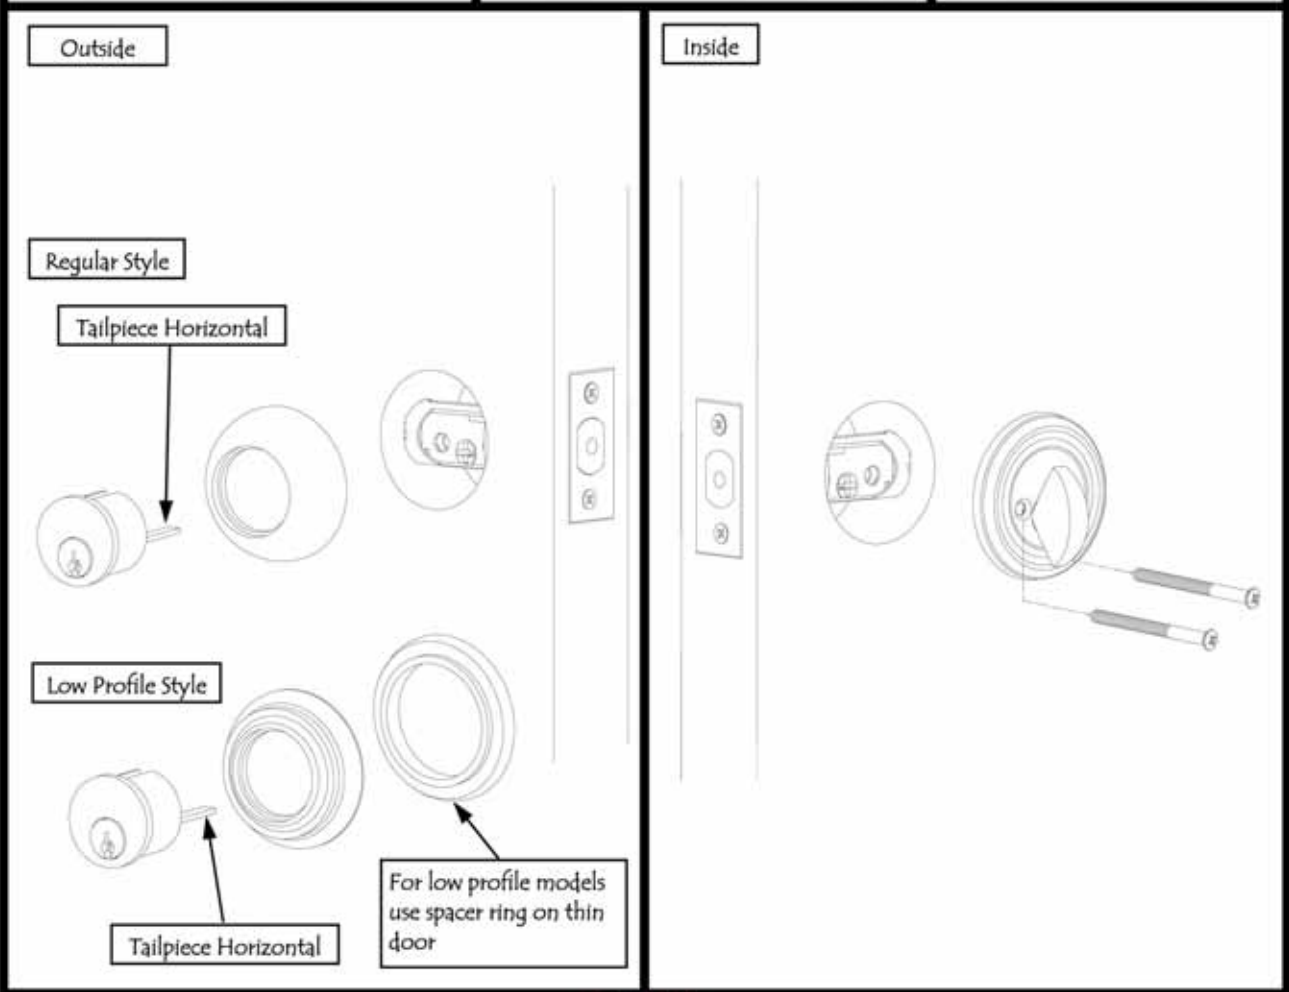


Installation Instructions-Single Cylinder Deadbolts

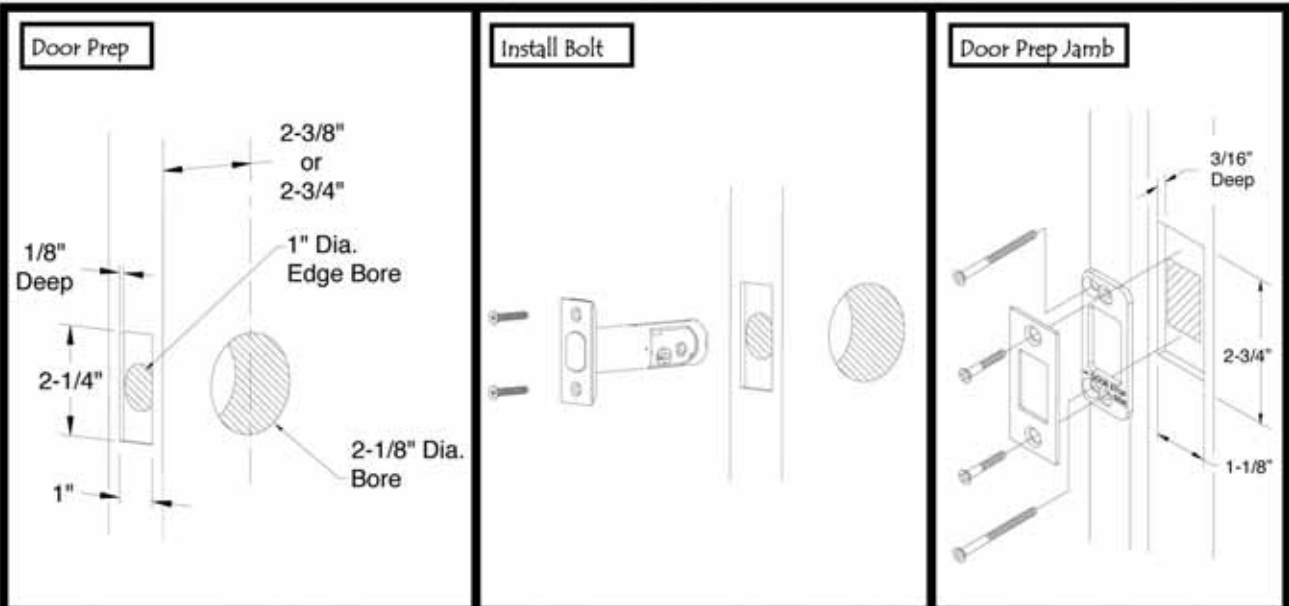

Installation Instructions-Double Cylinder Deadbolts

<p>Door Prep</p> <p>1/8" Deep 2-1/4" 1" 2-3/8" or 2-3/4" 1" Dia. Edge Bore 2-1/8" Dia. Bore</p>	<p>Install Bolt</p>	<p>Door Jamb Prep</p> <p>3/16" Deep 2-3/4" 1-1/8"</p>
--	----------------------------	--

Outside

Tailpiece Horizontal

Low Profile Style

Tailpiece Horizontal

For low profile models use spacer ring on thin door

Inside

Tailpiece Vertical

Low Profile Style

Tailpiece Vertical

EMTEK
ASSA ABLOY

114 DEADBOLT DL REV 03/08